



Next Generation 4K Picture Quality

Bring the incredible depth and quality of 4K resolution to your business with our BRAVIA 4K Professional Displays, available in 43" – 85" screen sizes.

Superior displays designed for business

Our BRAVIA 4K Displays are designed to suit all your professional needs so you always present a clear image. Portrait orientation reliability, advanced control, professional mode, optional interactive compatibility, 24/7 operation and an embedded HTML5 platform for easy digital signage creation.

Professional design

Our line-up offers all the technological performance and style you'd expect from BRAVIA, powered by our 4K HDR Processor X1 enhanced processor. The 4K LCD panel produces four times the pixels of Full HD for outstanding picture quality, while the ultra-slim new design enhances any corporate or retail environment.

Do more with our BRAVIA solutions

Look no further with BRAVIA Professional. Our new full-line series features a number of remarkable built in and optional solutions to customize your BRAVIA exactly the way you want.

Key Features


Around the clock display

With reliable 24/7 operation, the BRAVIA BZ series enable you to deliver your message around the clock. BRAVIA outshines ordinary displays with an incredibly high 620 cd/m²* and up to 850 cd/m²* brightness, combined with a combined with stunning 4K resolution, it ensures your visual communications always stand out, even in daylight or well-lit rooms, day and night.

*Except for the FW-43BZ35F and the FW-49BZ35F
**Model specific, conditions apply for some functionality

New functionality**

Discover a new world of possibilities with the new BRAVIA functionality. From easily mirroring your content into your BRAVIA with Apple AirPlay and Chromecast-built in, to using DICOM, and supporting the Wi-Fi 5GHz.

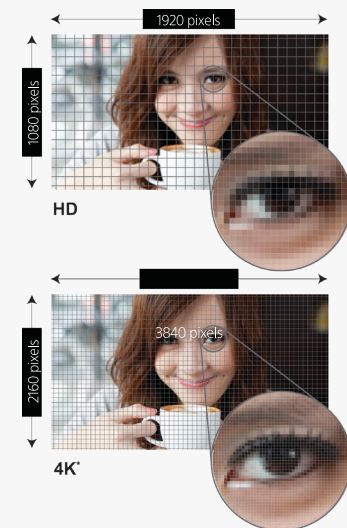


Optional Software & Accessories



BRAVIA Meeting (WQ-BM1)

BRAVIA Meeting enables centralized management of displays and interactive meetings via a network. The optional software, BRAVIA Meeting, enables remote monitoring of multiple displays, power control, and configuration changes. In addition, displaying PC screen shots wirelessly and annotation which enhances in-meeting collaboration.

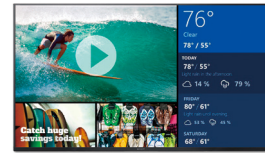

BRAVIA Signage (WQ-BS1)

BRAVIA Signage simplifies management and distribution of signage content across multiple networked BRAVIA displays. Group displays, schedule content playout and more – everything's included with this highly flexible package.



Simple Media Player 2 (WQF-USMP2) / Free of charge


Simple Media Player 2 is an easy-to-use standalone signage player application, allowing you to display video, photos and HTML5 content directly from a connected USB flash memory.

It's quick and intuitive to set up screens, edit and preview playlists and schedules using the BRAVIA display's remote controller.



FWA-CE100

Full HD USB Camera & Microphone exclusively designed for BRAVIA 4K Professional Displays.

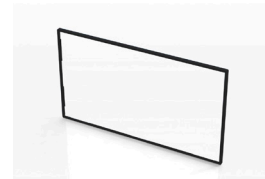


STP-IR Series

Touch overlay kit for 55", 65", 75" BRAVIA 4K Professional Displays.

For full features visit pro.sony/displays

© 2020 Sony Corporation. All rights reserved. Reproduction in whole or in part without permission is prohibited. Features and specifications are subject to change without notice. All non-metric weights and measurements are approximate. "Sony" and "BRAVIA" are registered trademarks or trademarks of Sony Corporation. All other trademarks are the property of their respective owners.

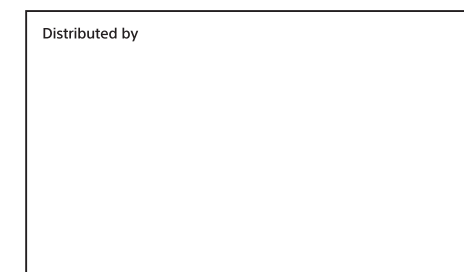

SONY

BRAVIA™ 4K Professional Displays

24/7 displays designed for business

BZ40H-series

FW-85BZ40H
FW-75BZ40H
FW-65BZ40H
FW-55BZ40H

BZ35F-series

FW-49BZ35F
FW-43BZ35F





Ultimate Picture Quality



16:9 4K resolution (3840 x 2160 pixels)

With over 8 million pixels, a 4K resolution screen offers four times the detail of Full HD. Combined with the ability to manage 4K 60P up to 18Gbps, it now produces a level of detail and realism beyond anything you've seen before.

4K HDR X1 Processor

Our powerful 4K HDR X1 Processor enhances contrast, clarity and color to the highest level. Clarity improves with intelligent upscaling and noise reduction, colors are individually enhanced, and the dynamic range of contrast is optimized frame by frame.

Higher contrast, higher brightness

With Full Array Local Dimming being supported (applies to BZ40H models only), specific sections of the screen can be incredibly bright while other areas remain pitch black so you get the best contrast possible, in addition, light areas in the image receive a boost in backlighting, creating brilliant peaks of brightness.

Compatible with High Dynamic Range (HDR)

View a wider range of brightness levels with HDR, the emerging video format that allows content creators to expand their range of creativity.



Bring the incredible depth and quality of 4K resolution to your business

Ideal for:

- Corporate Settings
- Digital Signage
- Video Conferencing
- Education Environments

Do more with BRAVIA

Software platform to enhance business applications

Simple and easy 4K signage configuration

You can easily establish 4K digital signage by simply selecting the files or URLs of video, stills, or web pages. It's all manageable via a USB memory; your 4K signage solution is ready to get started on an affordable budget. What's more, 2K content gets automatically upconverted to 4K so even your current content can be displayed with finer results.

Flexible content layout with HTML5

The BZ Series offers built-in support for the HTML5 application platform, so it's possible to use HTML5 interactive signage content as well as the portal site for hotel room guests without requiring a set-top box or PC. The content screen can be freely laid out using the 4K video, pictures, or even with the HDMI input.

Over 100 REST APIs for remote monitoring and control

With more than 100 REST APIs built-in, monitoring and controls from remote locations and integration with external systems are available. We also provide a free app that enables control of the display via IP.


Meeting room solution

Standard and enhanced interface in meeting rooms with smart features, and efficient automated systems for input management. There is no need for extra controllers in the room and settings stay exactly as they have been programmed.

BZ-series Specifications

		FW-43BZ35F	FW-49BZ35F	FW-55BZ40H	FW-65BZ40H	FW-75BZ40H	FW-85BZ40H	
General features	Screen Size	43"	49"	55"	65"	75"	85"	
	Brightness (cd/m ²)	505						
	Native contrast ratio	1400:1	5000:1	6,000:1				
	Dynamic contrast ratio	400000:1		550000:1	600000:1			
	Response Time (ms)	5		8		6		
	Display resolution (H x V, pixels)	3840x2160						
	HDR (High Dynamic Range) compatibility	Yes (HDR10, HLG)			Yes (HDR10, HLG, Dolby Vision)			
	Aspect Ratio	16:9						
	Portrait Compatibility	Yes						
	Display features	Dimming type	Frame Dimming		Local Dimming			
Display device		LCD						
Backlight type		Edge LED		Direct (Full Array LED)				
4K Processor		4K HDR Processor X1						
Operation time		24/7						
Video Specs	Wide Mode	Wide zoom/Normal/Full/Zoom/14:9		Auto/Wide zoom/Normal/Full/Zoom				
	4:3 Default	Yes						
	Video Processing	4K X-Reality PRO						
	Motion enhancer	Motionflow XR 800Hz (Native 100Hz)		X-Motion Clarity, Auto mode				
	TRILUMINOS Display	Yes						
	Viewing Angle (Right/Left/Up/Down)	178(89/89) degree						
	HDMI Signal	4096x2160p (24,50,60Hz), 3840x2160p (24,25,30,50,60Hz), 1080p (30,50,60Hz), 1080i (50,60Hz), 720p (30,50,60Hz), 720i/24p, 576p, 576i, 480p, 480i		4096x2160p (24,60Hz), 3840x2160p (24,30,60Hz), 1080p (30,60,120Hz), 1080i/24p, 1080i (60Hz), 720p (30,60Hz), 720i/24p, 480p				
Audio Specs	Speaker Position	Down Firing			Side Back + Down Firing			
	Audio Power Output	10W + 10W						
Professional features	Professional Hidden mode	Pro Mode						
	HDMI auto wake-up	Yes						
	HTML5 platform	Yes						
	Multicast/IPTV	Yes						
	Operating System* As of 2020 August	Android 9.0 (via firmware update)			Android 9.0			
Network Specs	On-board Storage (GB)	16GB* The actual capacity available to the user will vary depending on OS and installed software requirements.						
	Wi-Fi Direct	Yes						
	Wi-Fi Certified	Yes						
Convenience features	Wireless LAN	Integrated						
	USB playback codecs	MPEG1/MPEG1/MPEG2PS/MPEG2/MPEG2TS(HDV,AVCHD)/MPEG2, AVC/MP4(XAVC S)/AVC/MPEG4,HEVC/AV1(Xvid, MotionJpeg/ASF(WMV)/VCI/MOV/AVC/MPEG4, MotionJpeg/MKV-Xvid/AVC/MPEG4,VP8,HEVC/WEBM/VP8/3GPP/MPEG4,AVC/MP3/ASF(WMA)/WAV/MP4AAC/FLAC/MP3			MPEG1/MPEG1/MPEG2PS/MPEG2/MPEG2TS(HDV,AVCHD)/MPEG2,AVC/MP4(XAVC S)/AVC, MPEG4,HEVC/AV1,Xvid,MotionJpeg/ASF(WMV)/VCI/MOV/AVC/MPEG4,MotionJpeg/MKV-Xvid,AVC, MPEG4,VP8,HEVC/WEBM/VP8/3GPP/MPEG4,AVC/MP3/ASF(WMA)/LPCM/WAV/MP4AAC/FLAC/MP3			
	On Screen Clock	Yes						
	Sleep Timer	Yes						
	On/Off Timer	Yes						
	Chromecast built-in	Yes						
	Apple AirPlay (Internet required)	No		Yes				
	Control Specs	IP Control	Yes					
		RS-232C Control	1(Side)					
		HDMI-CEC	Yes					
Inputs and outputs	HDCP	HDCP2.3(for HDMI1/2/3/4)						
	Composite Video Input(s)	1 (Rear Hybrid w/Component)		1(Side)				
	HDMI inputs total	4 (3Side,1Rear)		4(4Side)				
	Analog Audio Input(s) (Total)	1 (Rear)		1(Side Analog Conversion)				
	Digital Audio Output(s)	1 (Rear)		1(Side)				
	USB ports	3 (Side)		2(Side)				
	Ethernet inputs	1(Side)						
Design features	Frame color	Black						
	Stand Design	Silver Chevron			Metal Blade Stand			
	VESA® Hole Spacing Compatible	Yes						
	VESA® Hole Pitch(W x H)	100x200 mm	200x200 mm	300x300 mm		400x400 mm		
Environment specs	Screen Size for WEB(diagonal, cm, integer or 1st decimal)	108.0 cm	123.2cm	139.0 cm	164.0 cm	189.0 cm	215.0 cm	
	Rated Power Consumption	120W	145W	173W	214W	277W	318W	
	Power Consumption (in Standby)	0.50W						
	Dynamic Backlight Control	Yes						
	Power Saving Mode / Back Light Off Mode	Yes						
Measurements	Dimension of TV without Stand (W x H x D)	965x569x58 mm	1098x644x58 mm	1231x710x70 mm	1450x833x70 mm	1674x961x71 mm	1899x1089x72 mm	
	Dimension of TV with Stand (W x H x D)	965x628x279 mm	1098x703x279 mm	1231x780x338 mm	1450x903x338 mm	1674x1034x410 mm	1899x1162x441 mm	
	Dimension of Package Carton (W x H x D)	1070x695x148 mm	1188x776x148 mm	1348x833x160 mm	1574x958x184 mm	1810x1107x186 mm	2036x1232x258 mm	
Weight	Weight of TV without Stand	10.8 kg	13.2 kg	16.5 kg	22.2 kg	32.9 kg	45.8 kg	
	Weight of TV with Stand	11.3 kg	13.7 kg	17.5 kg	23.2 kg	34.4 kg	47.7 kg	
	Weight of Package Carton(Gross)	15kg	19kg	23kg	31kg	46kg	62kg	

Complete Simplicity

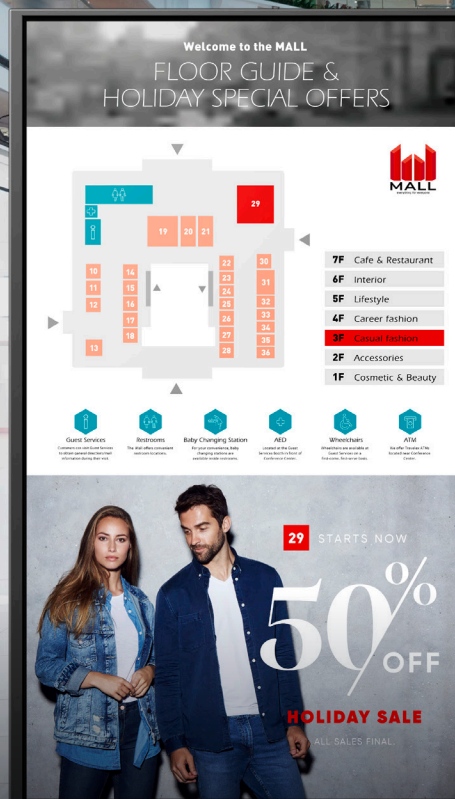

Strong performance

With new functionalities such as Wi-Fi 5GHz Support, Apple AirPlay, Chromecast built-in, DICOM, the BRAVIA performance is stronger than ever before.

Elegant design

With the sleek new design, your BRAVIA will add a perfectly sophisticated touch to any environment.

Versatile control options

Easily control your BRAVIA remotely – including on/off, input signal select and adjust volume – via IP or via RS-232C. For quick operation in meetings or for digital signage, it takes just one click to change to your chosen default settings.

Automatic on/off feature

Easily program your BRAVIA with the On Timer feature to automatically turn your BRAVIA on or off.

Mode portrait and 24/7 capability

For greater signage impact, the BRAVIA Display can be used in both in portrait orientation and operate 24/7.

Professional Mode

There is now more control to disable input or remote control, remove labels and block buttons; customize and store display settings and features, add security then copy them easily from display to display via USB flash memory.

